


# 'H' Style Wire Stake Installation

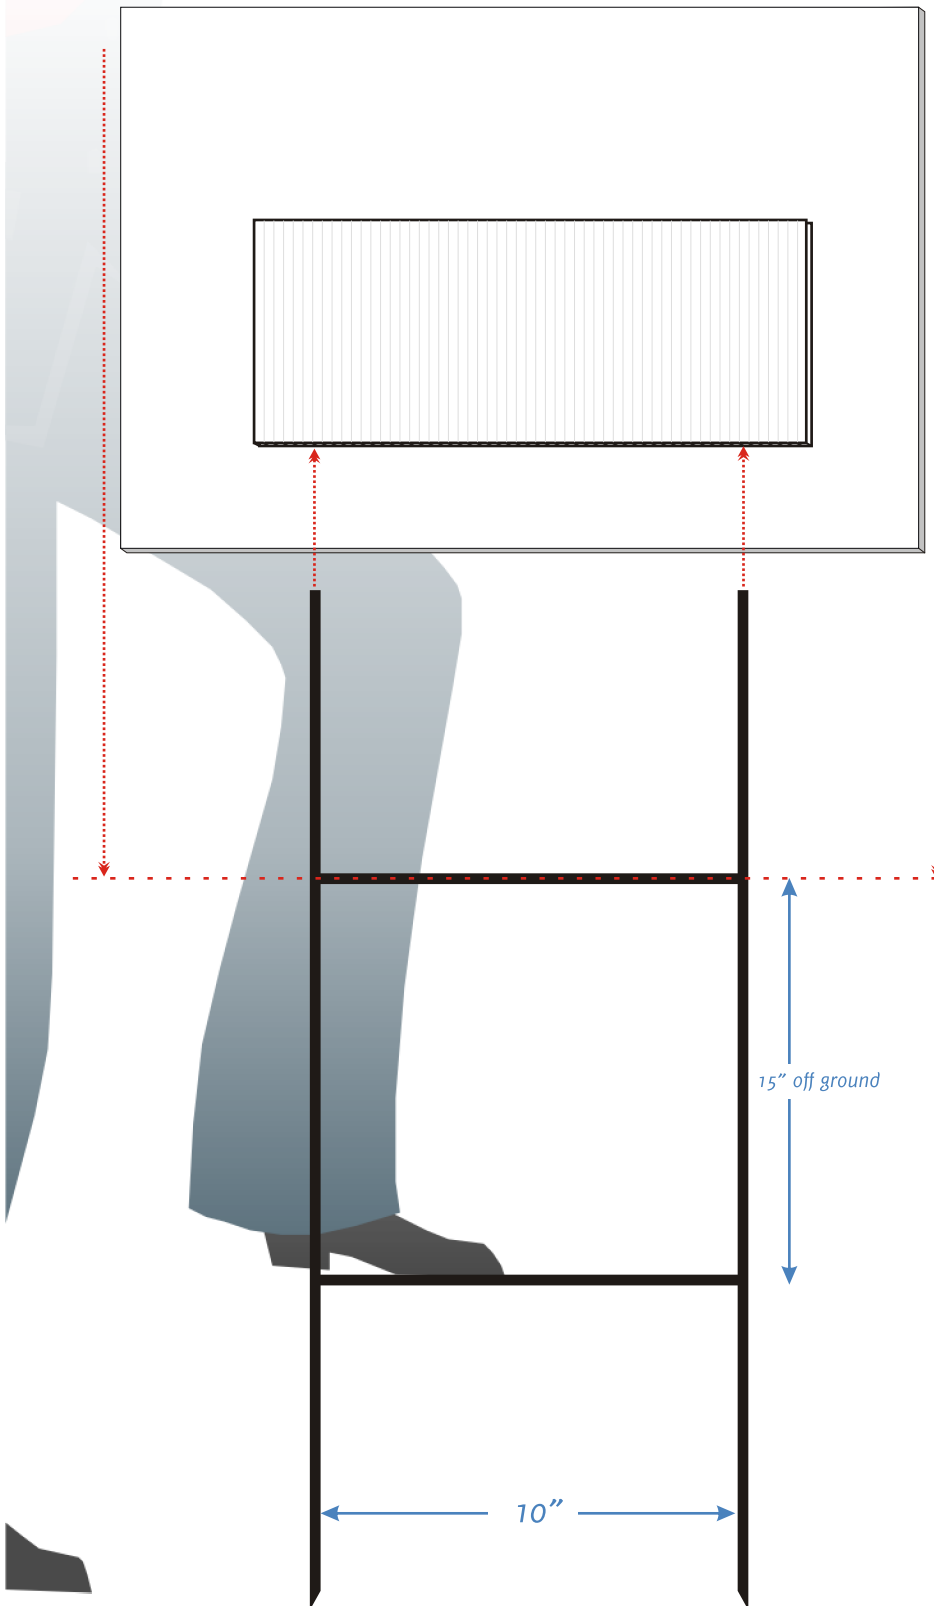

Align the skinny prongs on the post with the openings in the corrugated sign.

Gently push the prongs into the openings until the horizontal bar on the post is flush to the bottom sign.

Then push the stake prongs into the ground by gently stepping on the horizontal bar.